



## Tools Required:

Silicone Gun  
Stanley Knife  
Compatible Sealant  
Cordless screwdriver  
Screws  
Level  
Packers



1. Make sure you are equipped with all tools and rooflight for installation. Check for any damage upon delivery.



2. Check that the upstand is the correct size and is constructed correctly.



3. Clean and dry upstand so that the sealant can adhere properly for weather sealing.



4. Check that the upstand is level and square using packers where needed so the correct level is achieved all the way around.



5. Carefully unpackage the corner protectors on the Frameless Pyramid/Lantern.



6. Apply a 10mm high bead of compatible sealant to the top edge of the upstand all the way around.




7. Carefully lower the Lantern/ Pyramid into position pressing down firmly for a tight seal.



8. Carefully remove glass protection film.



9. Screw the Frameless Lantern down through the holes provided, making sure not to over tighten screws.

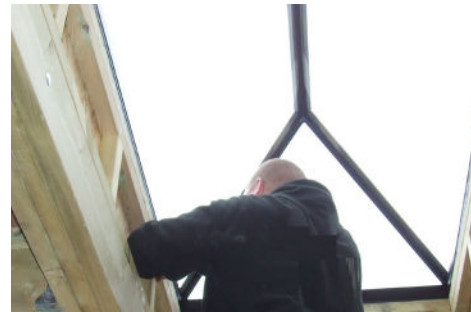

10. Repeat this process round the perimeter of the internal Frameless Lantern. Making sure all screw holes are screwed down correctly.



You have now successfully installed your Frameless Roof Lantern / Pyramid.